

# Micro Switch Installation




The micro switch activates the power supply when the roller door is fully open.

## Fire Safety in 5 simple steps

Your electrician needs to pre-wire the micro switch unit into your sockets, you will need enough wire to reach the back edge of your door roll when to door is fully open.

1. Open your roller door fully.
2. Hold the micro switch against the roll with the lever pressed in
3. Drill a 3mm pilot hole through the two holes
4. Screw the switch and cover into place using the provided screws
5. Listen as you pull the door down, you should hear a click as the switch deactivates.


## Connection Diagram

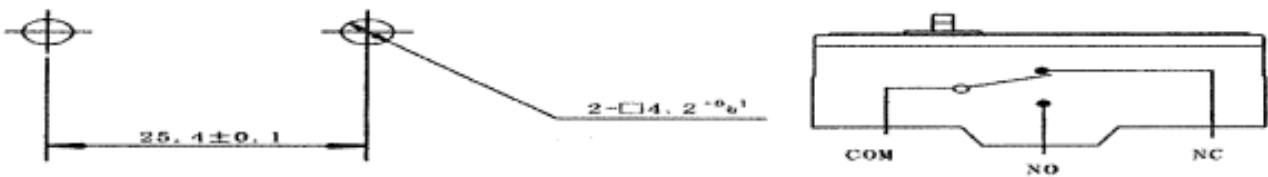

**Certification**—CCE, CE, UL, TUV



Your micro switch when the power sockets are activated

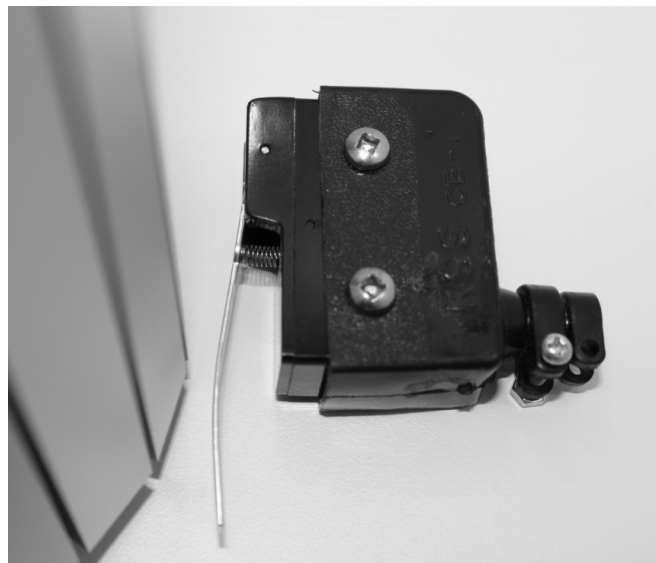

Your micro switch when the power sockets are deactivated